


## 使用说明书


感谢购买本款和弦练习器，在使用本款和弦练习器之前，请详细阅读说明书，以便更好的使用与保护，请将本说明书妥善保管以备参考。

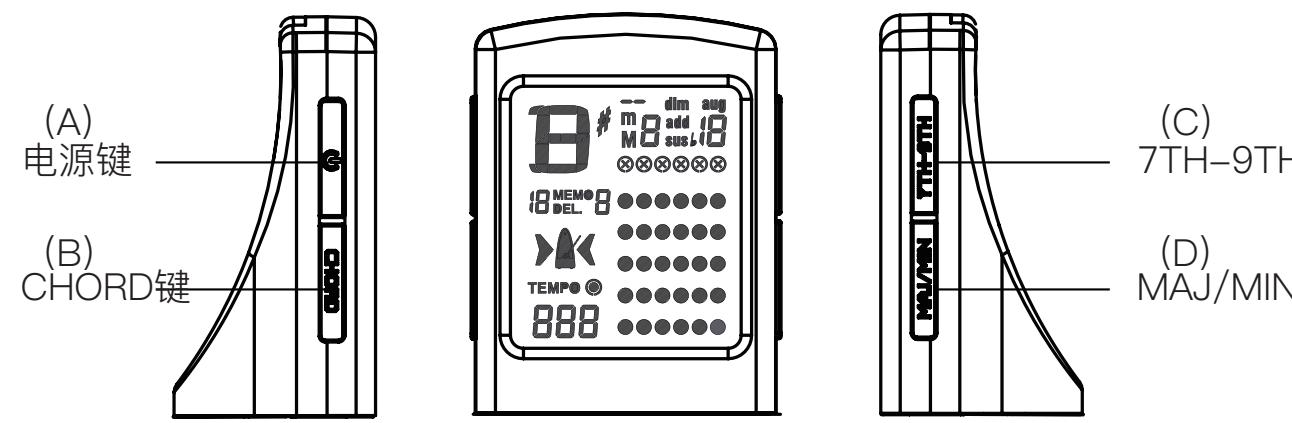

## 按键说明

- (A) 为电源键      (B) 为CHORD键  
 (C) 为7TH到9TH键      (D) 为MAJ/MIN键

- ①为和弦名显示区  
 ②为指法图显示区  
 ③为节拍及和弦编号显示区

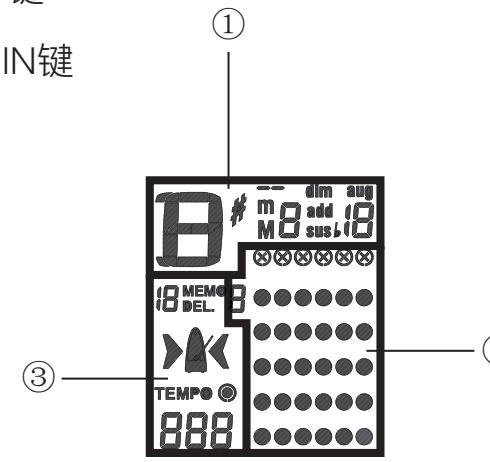

## 使用方法

- 长按 电源键 2 秒开机,任何模式下长按 2 秒关机
- 和弦表模式:区域①和②亮, 区域③不亮
- 循环模式:区域①和②和③全部亮
- 任何模式下长按 CHORD 键 2 秒切换 和弦表模式/循环模式

## ● 和弦表模式

## 选择和弦

单按 CHORD 键选择和弦根音(C、D、E、F、G、A、B)  
 单按 7TH-9TH 键选择细分和弦  
 单按 MAJ/MIN 键选择大小和弦

## 存储和弦

长按 7TH-9TH 键2秒松开区域③和弦编号闪烁, 单按MAJ/MIN可调整要存储和弦的顺序, 确认和弦再次长按 7TH-9TH 键2秒确认所要存储的和弦。

## 清除和弦

同时按住 7TH-9TH 键、 MAJ/MIN 键2秒, 此时区域 ①、②不亮, 区域③闪烁。  
 存储和弦全部清除。(注意: 清除和弦功能只能在和弦表模式下使用)

## ● 循环模式

单按 电源 键循环播放储存的和弦。此时区域③节拍器开始闪烁。再次单按 电源 键暂停。  
 单按 7TH-9TH 键节拍速度+1, 长按 7TH-9TH 键加快选择节拍速度。  
 单按 MAJ/MIN 键节拍速度-1, 长按 MAJ/MIN 键加快选择节拍速度。  
 同时按 7TH-9TH 键、 MAJ/MIN 键随机选择节拍循环速度。


**注：除播放储存和弦以外，5分钟若无任何操作则自动关机。**

中国制造

## Chord Trainer

## Instructions for use


Welcome to use this chord trainer SCT-80! Before using, please kindly read through this instructions to use it correctly, at the same time, keep this instructions safe for future reference.

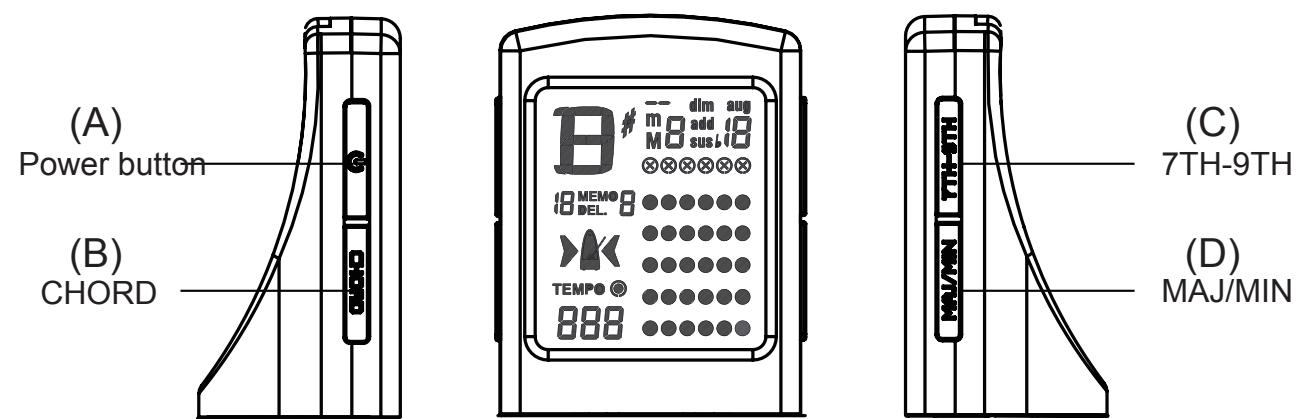

## Buttons Introduction

- (A) Power button      (B) CHORD button  
 (C) 7TH-9TH      (D) MAJ/MIN

- ①Display of chord name  
 ②Display of Fingering chart  
 ③Display of metronome and Chords number

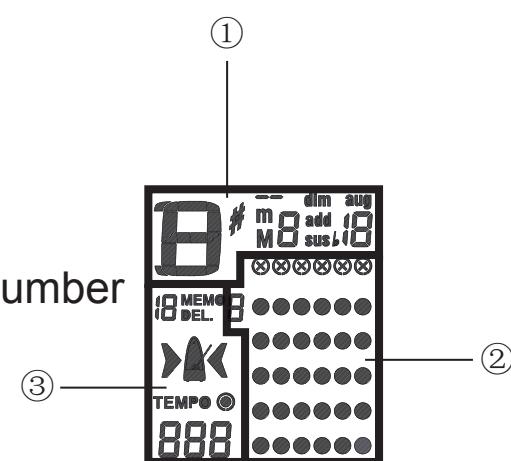

## How to use

1. Press A for 2 seconds to open, and another 2 seconds to shut down (no matter what modes the device is in).
2. Press B for 2 seconds, you can switch between Chord table mode and Circulation mode.
3. When it is in Chord table mode, Area ① and ② in light, area ③ in darkness.
4. When it is in Circulation mode, area ①,② and ③ all in light.

## ● Chord Table Mode

## How to choose chords

Press CHORD button to choose C, D,E,F,G,A,B  
 Press 7TH-9TH to choose segment chords  
 Press MAJ/MIN to choose major and minor chords

## How to reserve chords into device

Press 7TH-9TH 2 seconds, and chords number in area ③ flashes, then press 7TH-9TH again for 2 seconds to confirm reserving the chords into device.

## How to eliminate the chords

Press 7TH-9TH and MAJ/MIN buttons at the same time for 2 seconds, and area ③ flashes, and the stored chords are eliminated successfully.

## ● Circulation Mode

Press Power button to start playing the stored chords, at the same time, the metronome in area 3 starts flashing. Press power button again to suspend playing.

Press 7TH-9TH, the metronome tempo +1, press longer to increase the tempo.  
 Press MAJ/MIN, the metronome tempo -1, press longer to decrease the tempo.

**Note: The device will shut down automatically after 5 minutes if it is left without any operations (except in circulation mode).**

MADE IN CHINA