



ELECTRIC BICYCLE

instructions

Facebook: [cxymin3761761@163.com](https://www.facebook.com/cxymin3761761@163.com)

E-mail: cxymin3761761@163.com

WhatsApp: +8613535796908



An electric bike gets you close to nature and makes you love sports.

Contents

Chapter 1 Operation Guide

Chapter 2 Start to use

Chapter 3 Battery & Charger

Chapter 4 Troubleshooting

Chapter 5 warranty

Chapter 6 Product description

Thanks for using CMACEWHEEL electric bike. If you don't know how to assemble the bike, please search CMACEWHEEL on YouTube to get some related videos for your reference.

Chapter 1 Operation Guide

To ensure safety, please use this product after completing the following checks.


- 1.1 Is the battery working properly?
- 1.2 Is the braking system working properly?
- 1.3 Is the tyre pressure normal?
- 1.4 Please make sure that the stand pipe and saddle are properly adjusted and tightened. And please well lock all the folding joints.
- 1.5 Please make sure that the front and back wheel are well installed.
- 1.6 Is the shifting gears working properly?

Chapter 2 Start to use

There are three riding modes of this bike:
electric-only mode;
Cycling mode (without electric);
Assistant mode.

2.1 Buttons illustration.



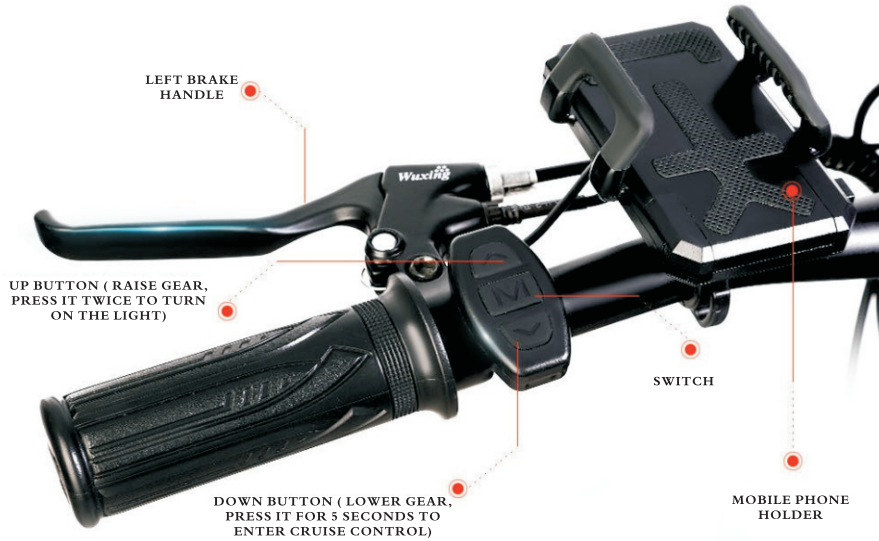

! PLEASE DO NOT BE CURIOUS TO CHANGE THE SETTINGS. THE PROGRAM OF LCD DISPLAY HAS BEEN WELL SET UP IN FACTORY. PLEASE DO NOT ENTER THE RESET MODE OF THE LCD DISPLAY, WHICH WILL CAUSE YOU UNNECESSARY TROUBLE. THANKS FOR YOUR COOPERATION!

2.2 For electric-only mode, please press button M for 5 seconds to enter electric-only mode, and use the accelerator to speed up.

2.3 Please use the electric-only mode from the first gear, and gradually shift to accelerate.

2.4 Please keep your hands at the position of the brake levers, in case of special circumstances, you can quickly cut off the power.


2.5 Please do not use the cruise control function in bad road conditions and crowded places to avoid danger.

2.6 Power assistant mode needs to turn on the power, please press button M for 5 seconds to enter the electric mode, and adjust the gear to third gear, and use the pedals to start the electric bike.

2.7 You could use Cycling mode (mechanical mode) without turning on the power. Adjusting the front derailleur to 3rd gear, and then the cycling mode will be easier for you to ride.

Chapter 3 Battery & Charger

3.1 Please use the original Charger.

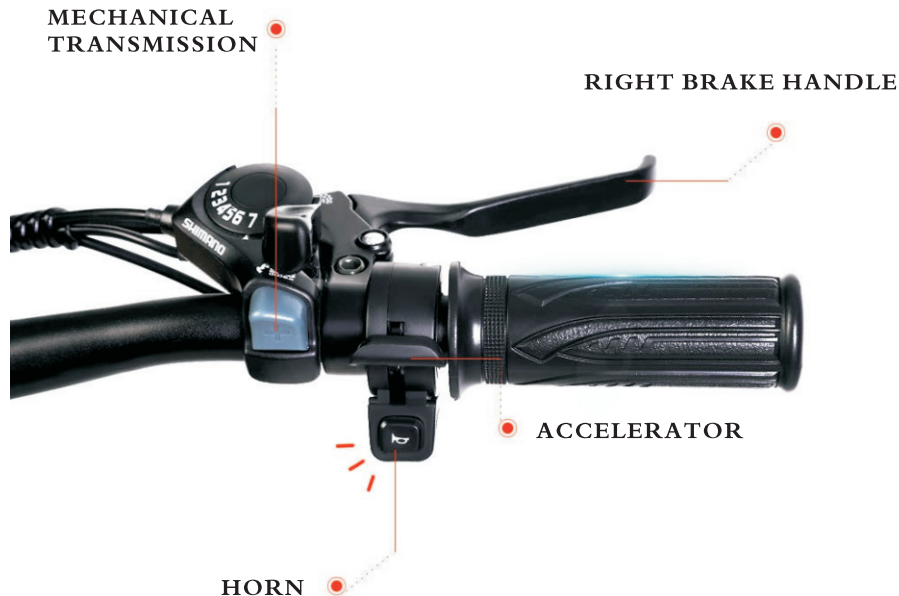

3.2 Please keep the charging time at 4-7 hours until the charger's light turns green, and finally unplug the charger.

3.3 Do not use metallic objects to touch the charging port of the battery to avoid short circuit.

3.4 If you do not use the battery for a long time, please fully charge the battery once a month.

3.5 The battery can not be used in high temperature and heavy rain to prevent water from entering the battery.

Chapter 4 Troubleshooting

4.1 Battery failure: Can the battery be charged normally? Is the battery key faulty? Is the fuse burnt out? Is the fuse tightened? Are the voltages of the charger and battery normal?

4.2 No booster: Does the booster deviate? Is the wiring of the booster damaged?

4.3 The motor does not work: do the booster and accelerator also not work? Find the controller and check all the wiring and interfaces to see if there's any problem.

If there's product failure, please search CMACEWHEEL on YouTube to find some related videos for reference. If you need our help, please contact Mrs Luo by cxymin3761761@126.com. Thanks for your understanding and support.

Chapter 5 warranty

parts	Warranty
Frame	36 months
Battery	12 months
motor	
Controller	
Instrument, Speed Control Handle, Ring, Crank Gear Disk, Front Fork, Front Shaft, Rear Shaft, Flywheel, Chain, Charger	6 months
Lamps, pedals, tires, brake handles, expendable consumables	1 months
If it is not a quality problem, please pay for the accessories by the customer.	

Chapter 6 Product description

Gt20



T20



Gw20



Y20



Ks26



X26

