

| Specifications |   |
|----------------|---|
| Brand Name:    | Eachine                                 |
| Item Name:     | 2S 75mm Brushless Whoop racer drone BNF |
| Wheelbase:     | 75mm                                    |
| Size:          | 98mm*98mm*36mm                          |
| Weight:        | 33g(without battery)                    |

**VTX Bands and Channels setup**

Blue LED5 and Red LED8 light on, indicating frequency 5917MHZ( BAND5 and CH8)  
 Blue LED1 and Red LED2 light on, indicating frequency 5845MHZ(BAND1 and CH2)

**Frequency and channel frequency table:**

| FR       | CH    | CH1   | CH2   | CH3   | CH4   | CH5   | CH6   | CH7   | CH8 |
|----------|-------|-------|-------|-------|-------|-------|-------|-------|-----|
| Band1(A) | 5865M | 5845M | 5825M | 5805M | 5785M | 5765M | 5745M | 5725M |     |
| Band2(B) | 5733M | 5752M | 5771M | 5790M | 5809M | 5828M | 5847M | 5866M |     |
| Band3(E) | 5705M | 5685M | 5665M | 5665M | 5885M | 5905M | 5905M | 5905M |     |
| Band4(F) | 5740M | 5760M | 5780M | 5800M | 5820M | 5840M | 5860M | 5880M |     |
| Band5(R) | 5658M | 5695M | 5732M | 5769M | 5806M | 5843M | 5880M | 5917M |     |

- There are 3 ways to switch the vtx channels:
- Long press the switch button to change the Band of the VTX, shorter press the switch button to change the channels of the VTX.  
(Can't save, it will lost the channel while re-power for the Trashcan since the Smartaudio function enabled)
  - Go to Betaflight CLI, type the command:  
 Set vtx\_band=3  
 Set vtx\_channel=1  
 Set vtx\_freq=5705  
 save  
 Notes: The vtx\_freq should match the vtx\_band and vtx\_channel as the VTX Channel list shows.  
 For example, if you set vtx\_freq=5732, you should set vtx\_band=5 and vtx\_channel=3
  - Enable Smartaudio for UART1, then move the stick of the transmitter (THR MID+YAW LEFT + PITCH UP) to enter OSD Menu, Enter to Features, then enter to VTX SA to set VTX Band and channel

| Identifier | Configuration/MSP | Serial Rx | Telemetry Output | Sensor Input    | Peripherals         |
|------------|-------------------|-----------|------------------|-----------------|---------------------|
| USB VCP    | 115200            | Off       | Disabled   AUTO  | Disabled   AUTO | Disabled   AUTO     |
| UART1      | 115200            | On        | Disabled   AUTO  | Disabled   AUTO | Disabled   AUTO     |
| UART2      | 115200            | Off       | Disabled   AUTO  | Disabled   AUTO | TBS SmartAud   AUTO |



**Package includes:**

| Item Name                           | Basic version | Part NO. |
|-------------------------------------|---------------|----------|
| 75mm Trashcan Brushless whoop Frame | 1             | TC751    |
| Crazybee F4 Pro no RX version       | 1             | TC752    |
| TC0803 KV15000 Motor                | 4             | TC753    |
| 40mm propeller(4cw+4ccw)            | 1             | TC754    |
| 5.8g 25mw~200mw Whoop_vtx           | 1             | TC755    |
| Caddx EOS2                          | 1             | TC756    |
| 3.8v 300mah 40C/80C battery         | 4             | TC757    |
| USB Lipo/LIHV Charger               | 1             | TC758    |
| XT30 Connector and wires            | 1             | TC759    |
| Propeller disassemble tool          | 1             | TC7510   |
| Screwdriver                         | 1             | TC7511   |
| Eachine Trashcan bag                | 1             | TC7512   |

**Receiver configuration**

1. Connect your Serial-based receiver to the Crazybee F4 PRO flight controller according to the following connection diagram table

|                    | Frsky/Futaba                      | Flysky/Spektrum/TBS               |
|--------------------|-----------------------------------|-----------------------------------|
| Crazybee F4 PRO    | XM/XM+/FHSS/FD800 RX              | Fli10/Fli10/Fli14/SP09X RX        |
| R1(No inverter)    |                                   | CRSF/IBUS/DSM2/DSMX               |
| IR1(With inverter) | SBUS                              |                                   |
| +5V                | +5V                               | +5V                               |
| GND                | GND                               | GND                               |
| TX2                | Smart audio control (VTX support) | Smart audio control (VTX support) |
| RX2                |                                   |                                   |

2. Enable Serial RX for UART1 and choose the correct serial Receiver provider based on the protocol of your receiver

| Identifier | Configuration/MSP | Serial Rx | Telemetry Output | Sensor Input    | Peripherals         |
|------------|-------------------|-----------|------------------|-----------------|---------------------|
| USB VCP    | 115200            | Off       | Disabled   AUTO  | Disabled   AUTO | Disabled   AUTO     |
| UART1      | 115200            | On        | Disabled   AUTO  | Disabled   AUTO | Disabled   AUTO     |
| UART2      | 115200            | Off       | Disabled   AUTO  | Disabled   AUTO | TBS SmartAud   AUTO |

Receiver

Serial-based receiver (SPEKSAT, S) Receiver Mode

**Note:** Remember to configure a Serial Port (via Ports tab) and choose a Serial Receiver Provider when using RX\_SERIAL feature.

SBUS Serial Receiver Provider

SPEKTRUM1024 DSM2

SPEKTRUM2048 DSMX

SBUS XM/XM+/FD800 SBUS/ FHSS

SUMD

SUMH

XBUS\_MODE\_B

XBUS\_MODE\_B\_RJ01

IBUS Fli10/Fli10/Fli14/RX2A PRO/FS82

JETIEXBUS

CRSF TBS CRSF NANO

**Arm/Disarm the Motor Use frsky x9d as an example**

1. The Default Arm/Disarm switch for Trashcan is AUX1(Channel 5), and you can also customize it with Betaflight Configurator.

Modes

Use ranges to define the switches on your transmitter and corresponding mode assignments. A receiver channel that gives a reading between a range min/max will activate the mode. Remember to save your settings using the Save button.

ARM AUX 1

Min: 1400 Max: 2100

AIR MODE


ANGLE AUX 2

Min: 1200 Max: 2100



2. Turn on the Frsky transmitter (Use X9D+ as an example) and move to the MIXER interface, Set "SA" or "SB" switch etc. for Ch5 to ARM/DISARM the motor.





3. The default channel map for Trashcan PNP version is TAER1234, please make sure your transmitter is matched, otherwise it will can't be armed. Toggle the AUX1 Switch, the Green LED on the flight controller will getting to be solid, this indicates the motor was armed. And also you can found "Armed" displayed on your FPV Goggles or the FPV Monitor. Please make sure keep the Trashcan level before arming. Be careful and enjoy your flight now!

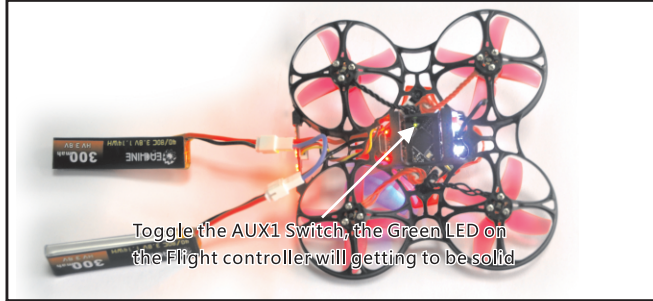



### Flight controller connection diagram

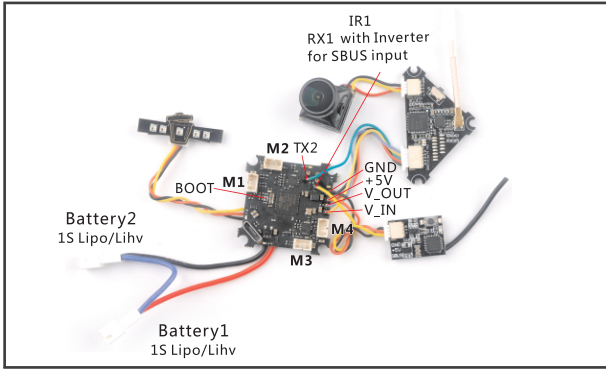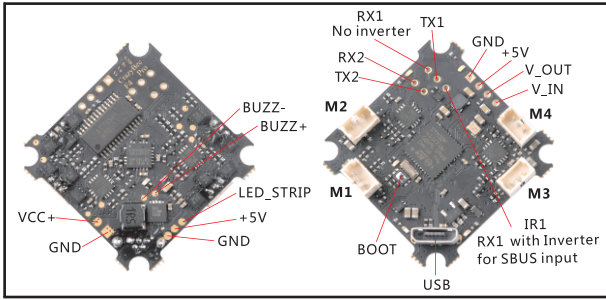

### Charger the Lipo Battery

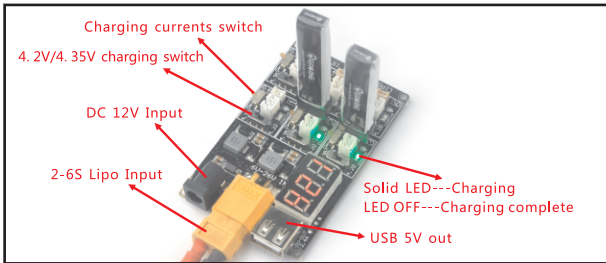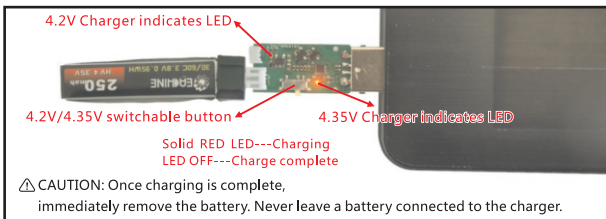

### Mixer type and ESC/motor protocol

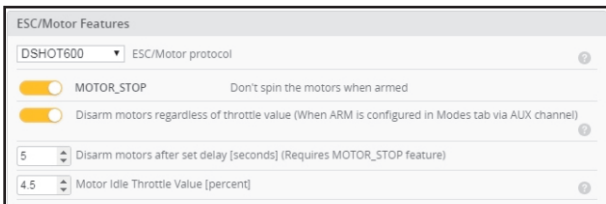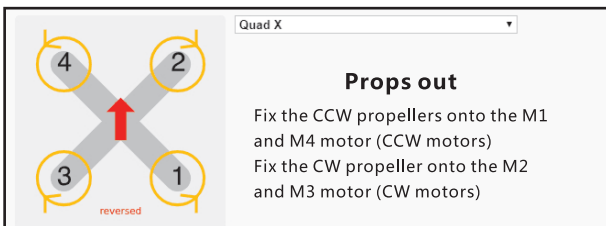

### Default PID setting


|            | Proportional | Integral | Derivative | Feedforward | RC Rate | Super Rate | Max Vel [deg/s] | RC Expo |
|------------|--------------|----------|------------|-------------|---------|------------|-----------------|---------|
| Basic/Acro |              |          |            |             |         |            |                 |         |
| ROLL       | 46           | 45       | 25         | 60          | 1.20    | 0.75       | 960             | 0.00    |
| PITCH      | 50           | 50       | 27         | 60          | 1.30    | 0.75       | 960             | 0.00    |
| YAW        | 45           | 100      | 0          | 100         | 1.30    | 0.80       | 1300            | 0.00    |

### ESC Check and Flash firmware


1. Download New release BLHeliSuite from: <https://www.mediafire.com/folder/dx6kfaasyo241/BLHeliSuite>
2. Connect the Crazybee F4 PRO Flight controller to computer and power for it with battery



3. Open the Device Manager of your computer, find the Ports, please make sure the Com port Serial Number is under 255, otherwise it will can't connect to the BLHELISUITE. You can change the port serial number like the following step:

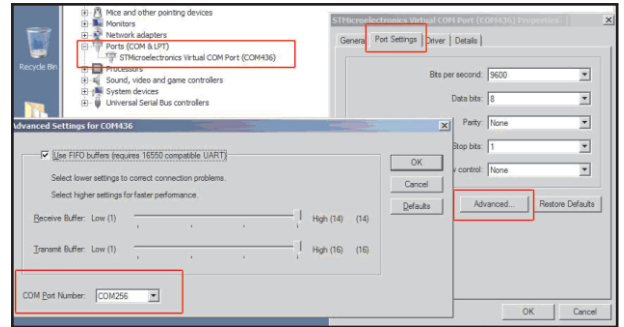


4. Open the BLHELISUITE, Select SILABS BLHeli Bootloader (Cleanflight) from the third tab on the top side. Then Select the right Serial com port and Click connect. You can also Flash the new release BLHeli\_s firmware via the BLHELISUITE, the firmware Target is "S-H-50"

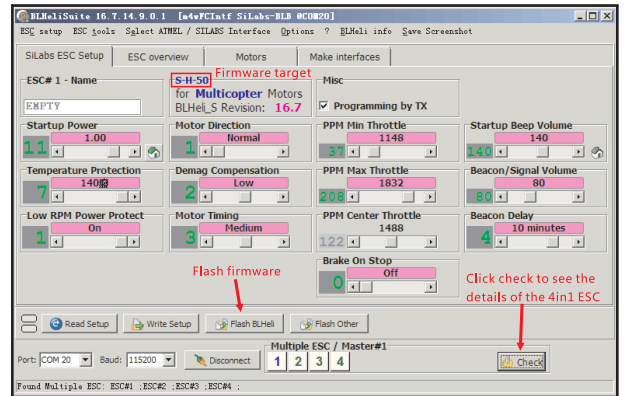

### Flight controller firmware update

1. Install latest STM32 Virtual COM Port Driver <http://www.st.com/web/en/catalog/tools/PE257938>
2. Install STM BOOTLOAD Driver (STM Device in DFU MODE)
3. Open Betaflight configurator and choose firmware target "CrazybeeF4FR", then select the firmware version.
4. There are 2 ways to get in DFU Mode: 1). solder the boot pad and then plug USB to computer 2). loading betaflight firmware and hit "flash", then it will getting into DFU Mode automatically.
5. Open Zadig tools to replace the drivers from STM32 Bootloader to WINUSB Driver.
6. Reconnect the flight controller to the computer after replace driver done, and open Betaflight Configurator, loading firmware and flash.

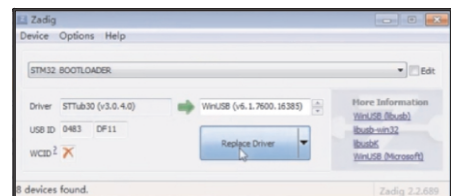

\*We will update the firmware for Crazybee F4 PRO and release to our website in time.

### "Flip over after crash" procedure

Set one channel of your radio transmitter to activate the Flip over function in the Mode tab of Betaflight configurator.

